## BACKPACK SPRAYER MAINTENANCE AVOID SPILLAGE AND LEAKS



Check and replace any damaged valves

Check and replace hose clamps that are damaged

Check and replace gaskets that are damaged

appropriate nozzle.
Replace nozzle if damaged

8 Wash the sprayer after using it

